



E6JF - 6" DEEP 45 DEGREE HURRICANE DUTY J BLADE EXTRUDED ALUMINUM STATIONARY LOUVER

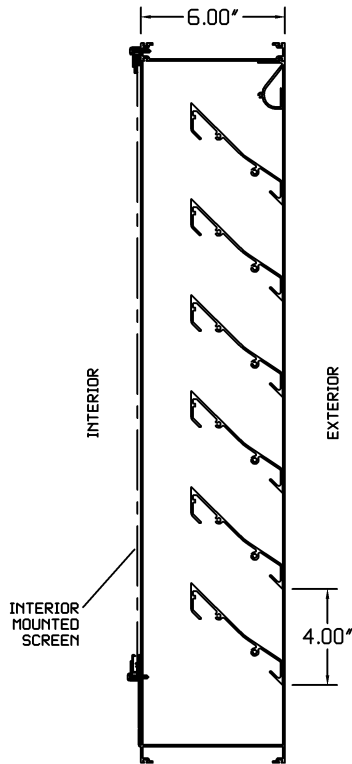

SECTION VIEW

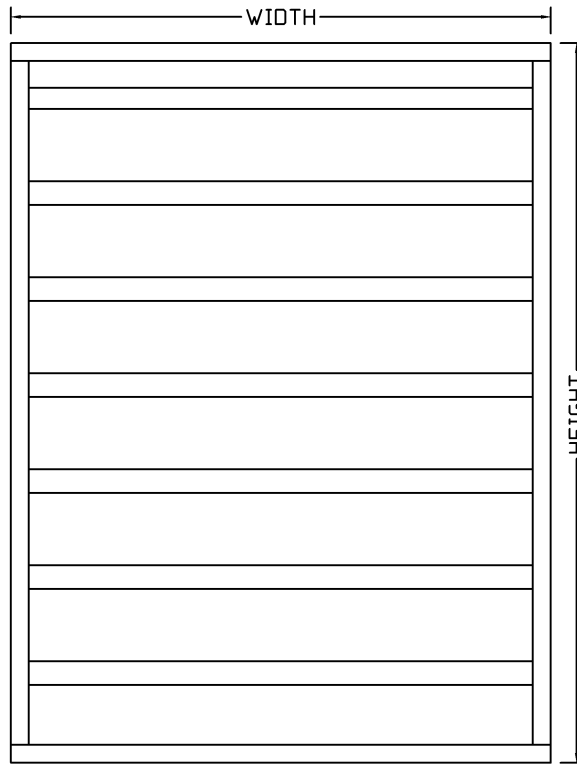

ELEVATION VIEW

BLADE - 0.081" THICKNESS TYPE 6063-T5 EXTRUDED ALUMINUM
 FRAME - 0.081" THICKNESS TYPE 6063-T5 EXTRUDED ALUMINUM
 DESIGNED FOR HURRICANE FORCE WIND LOADS
 SIZES 12" WIDE X 12" HIGH UP TO UNLIMITED SIZE AVAILABLE

OPTIONS:
 MOUNTING FOR VARIOUS OPENING TYPES
 ARCHITECTURAL SHAPES (SEE SPECIAL SHAPES TECH SHEET)
 ARCHITECTURAL FINISHES
 VARIOUS SCREENS

MIAMI-DADE COUNTY, FL APPROVAL:
 NOA# 14-0708.06 EXPIRES 10/31/2018
 FLORIDA CERTIFICATE OF APPROVAL:
 # FL16827

CONSTRUCTION	FRAME STYLE *	STIFFENER	VERTICAL MULLION (MULTIPLE PANELS WIDE)	HORIZONTAL MULLION (MULTIPLE PANELS HIGH)
STANDARD	EXTERIOR CHANNEL "C" FRAME	EXTERIOR BLADE STIFFENER STIFFENER (AS REQ'D TO MEET WIND LOAD)	EXTERIOR VERTICAL MULLION (JOINED BY INSTALLER) STIFFENERS (JOINED BY INSTALLER) MULLION SUPPORT AS REQ'D TO MEET WIND LOAD (ATTACHED BY INSTALLER) VARIES	EXTERIOR STIFFENER (ATTACHED BY INSTALLER)
OPTIONAL	EXTERIOR FLANGE "F" FRAME		HIDDEN	HIDDEN

ARCHITECTURAL L·O·U·V·E·R·S



266 W Mitchell Ave - Cincinnati, OH 45232
 PH: (888) 568-8371 Fax: (888) 568-8370

PROJECT			
CONTRACTOR			
ARCHITECT			
DRAWN BY: JRR	DATE: 7/2015	DRAWING TYPE: TECHNICAL SHEET	DRAWING TITLE: E6JF



The Architectural Louvers Model E6JF is tested in accordance with AMCA 500-L Laboratory Methods of Testing Air Louvers for Rating. The data presented are the results of these tests. Tested louver size is 48" wide x 48" high and does not include the effects of bird screen.


Airflow Resistance

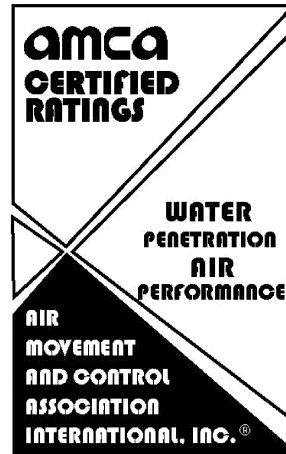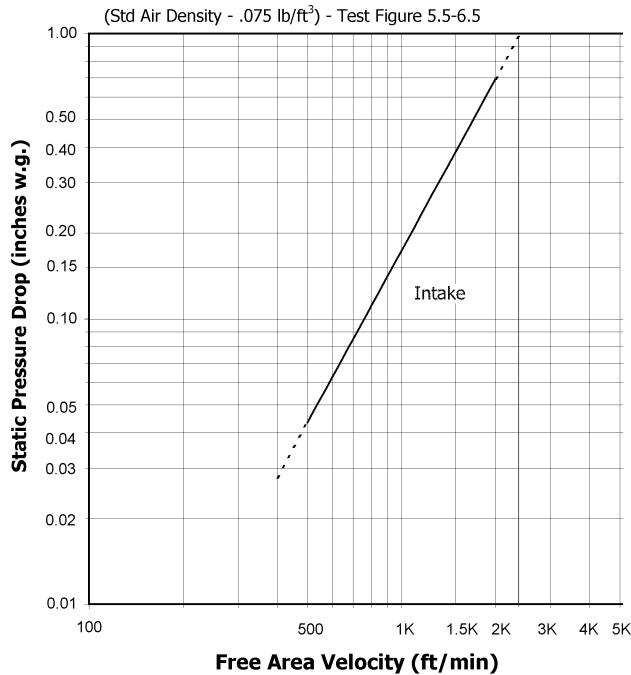

Architectural Louvers certifies that model E6JF louver shown herein is licensed to bear the AMCA seal. The ratings shown are based on tests and procedures performed in accordance with AMCA Publication 511 and comply with the requirements of the AMCA Certified Ratings Program. The AMCA Certified Ratings Seal applies to air performance ratings and water penetration ratings only.

Model: E6JF resistance to airflow
Free area velocities (shown left) are higher than average face velocity or duct velocity. See louver application information.

Water Penetration

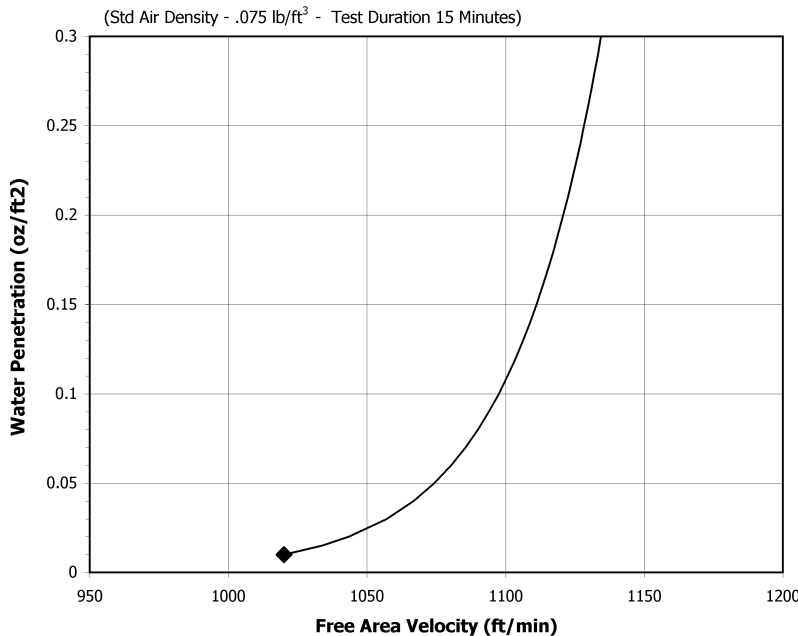

The AMCA Water Penetration Test provides a method for comparing various louver models and designs as to their efficiency in resisting the penetration of rainfall under specific laboratory test conditions. The point of zero water penetration is defined as that velocity where the water penetration curve projects through .01 oz. of water (penetration) per sq. ft. of louver free area. The beginning point of water penetration for this Model E6JF is 1020 fpm free area velocity. These performance ratings do not guarantee a louver to be weatherproof or stormproof and should be used in combination with other factors in selecting louvers (i.e. prevailing wind direction, weather patterns for the building location area, desired safety factor, etc.).



Application of air louvers involves selecting an airflow velocity through the louver free area (free area velocity in fpm) that produces an acceptable pressure drop and for intake applications minimizes carry-over of normally occurring rain. Architectural Louvers does not warrant our louvers to prevent water penetration under all combinations of wind and rain. Water penetration through Model E6JF begins at 1020 fpm free area velocity. Intake air louver selection using a free area velocity below 1020 fpm is recommended. Louver selection involves the following steps, and depending on the information provided, either step may come first.

Select Free Area Velocity - Fan Forced Intake:

Using the Airflow Resistance Chart, select a free area velocity that produces an acceptable pressure drop with minimal water penetration. (Water penetration is not typically considered when selecting exhaust louvers.)

Determine Louver Free Area:

Using the free area velocity from previous step and total cfm, determine the louver Free Area required. Using louver Free Area Chart, select a louver with the required free area. If louver size is given, determine free area from chart and work backwards to determine maximum airflow. See examples below.

Free Area Chart (ft²)

		Louver Width (Inches)							
		12	24	36	48	60	72	84	96
Louver Height (Inches)	12	0.28	0.60	0.92	1.25	1.57	1.85	2.17	2.49
	24	0.84	1.81	2.77	3.73	4.70	5.54	6.51	7.47
	36	1.41	3.01	4.62	6.22	7.83	9.23	10.84	12.45
	48	1.97	4.22	6.46	8.71	10.96	12.93	15.18	17.42
	60	2.53	5.42	8.31	11.20	14.09	16.62	19.51	22.40
	72	3.09	6.62	10.16	13.69	17.22	20.31	23.85	27.38
	84	3.65	7.83	12.00	16.18	20.35	24.01	28.18	32.36
	96	4.22	9.03	13.85	18.67	23.48	27.70	32.52	37.33

Louver Selection Examples - Fan Forced Intake:

Example 1:

Airflow given as 6500cfm (fan volume)– select louver size.

A. Determine louver free area by dividing airflow by free area velocity (do not exceed 1020 fpm on intake louver applications).

$$\begin{aligned} \text{cfm} / \text{fpm} &= \text{ft}^2 \\ 6500 / 1020 &= 6.37 \end{aligned}$$

B. Select a louver with at least the required louver free area from Free Area Chart above.

$$\begin{array}{l} \text{Width} \times \text{Height} \quad \text{Free Area from Chart} \\ 36 \times 48 \quad \quad \quad 6.46 \end{array}$$

(Other selections available – See Free Area Chart above)

C. Calculate Free Area Velocity

$$\begin{aligned} \text{fpm} &= \text{cfm} / \text{ft}^2 \text{ free area of louver} \\ 1006 &= 6500 / 6.46 \end{aligned}$$

D. Check the pressure drop of the selected louver at the calculated airflow (Airflow Resistance Chart on Page 2).

in w.g. = 0.176 at 1006 fpm free area velocity

Example 2:

Louver size given as 96 W x 48 H – determine maximum airflow.

A. Use Free Area Chart to obtain ft² for given size

$$\text{Free Area} = 17.42 \text{ sq ft}$$

B. Multiply Free Area x Free Area Velocity (Do not exceed 1020 fpm on intake louver applications).

$$\begin{array}{l} \text{ft}^2 \times \text{fpm} \quad = \text{cfm} \\ 17.42 \times 1020 \quad = 17772 \end{array}$$

C. Check the pressure drop of the selected louver at the calculated airflow (Airflow Resistance Chart on Page 2).

in w.g. = 0.181 at 1020 fpm free area velocity